

# WISH SEATING RIGHT SIDE ADJUSTMENTS



## **Rotate Arm Cap:**

Press button on inside and move arm cap in or out.

## **Adjust Arm Cap:**

Press button on outside and move arm cap backward, forward or side to side.

## **Adjust Arm Height 2D or 4D:**

Press button on outside and lift up or down.

## **If arm is height adjustable only:**

Press button on front of arm cap and lift up or down.

## **Back Support Tension:**

Pull knob out and rotate clockwise to increase back tension; rotate counter-clockwise to decrease tension.

## **Seat Height Adjustment:**

Stand up and pull lever to raise seat height or pull lever while sitting in chair to lower seat height to desired position.

## **Adjust width of arms:**

Pull down on lever and move arm in or out and lock the lever in place.

**Kimball®**

A unit of Kimball International  
©2016 Kimball International, Inc.  
Part No. 2984422

**WISH™**

kimball.com / 800.482.1818

# WISH SEATING LEFT SIDE ADJUSTMENTS

## **Adjust Lumbar Support:**

Move 2 tabs on back of chair up or down to desired comfort.

## **Back Tilt Lock Mechanism:**

To lock back in upright position, turn knob clockwise; to unlock turn knob counter-clockwise.

To lock chair in another angled position lean back and turn knob clockwise; to unlock turn knob counter-clockwise.

## **Seat Depth:**

Pull lever up and move seat front or back to desired position.



**Kimball®**

A unit of Kimball International  
©2016 Kimball International, Inc.  
Part No. 2984422

**WISH™**

kimball.com / 800.482.1818