

WISH SEATING RIGHT SIDE ADJUSTMENTS

Rotate Arm Cap

Press button on inside and move arm cap in or out.

Adjust Arm Cap

Press button on outside and move arm cap backward, forward or side to side.

Adjust Arm Height 2D or 4D

Press button on outside and lift up or down.

If arm is height adjustable only

Press button on front of arm cap and lift up or down.

Back Support Tension

As seated, pull knob out and rotate forward to increase back tension; rotate backwards to decrease tension.

Seat Height Adjustment

Stand up and pull lever to raise seat height or pull lever while sitting in chair to lower seat height to desired position.

Adjust width of arms

Pull down on lever and move arm in or out and lock the lever in place.



Kimball[®]

A unit of Kimball International
©2016 Kimball International, Inc.
Part No. 2984422

WISH[™]

kimball.com / 800.482.1818

WISH SEATING LEFT SIDE ADJUSTMENTS

Adjust Lumbar Support

Move 2 tabs on back of chair up or down to desired comfort.

Back Tilt Lock Mechanism

As seated, to lock back in upright position, turn knob backwards; to unlock, turn knob forward.

To lock chair in another angled position, lean back and turn knob backwards; to unlock, turn knob forward.

Seat Depth

Pull lever up and move seat front or back to desired position.



Kimball®

A unit of Kimball International
©2016 Kimball International, Inc.
Part No. 2984422

WISH™

kimball.com / 800.482.1818