

# Kimball®

## HELIO™

WORK  
UNFRAMED



# Helio Task Chair

## Arm Caps

Apply hand pressure for front to back, side to side, and pivoting left to right positions.

## Height Adjustable Arm

Engage button to slide arm up or down for height adjustability.

## Width Adjustable Arm

To engage upright width adjustment, push lever down and move arm to desired position and lift lever up.

## Seat Height Adjustment

Stand up and pull lever to raise seat height or pull lever while sitting in chair to lower seat height to desired position.

## 4 Position Synchro Lock

To lock back in upright position, lift up on lever; to unlock, push down on lever. To lock chair in another angled position lean back to desired position and lift up on lever; to unlock, push down on lever.

## Seat Depth Adjustment

Pull lever up and slide seat front or back to desired position.



# Kimball®

A unit of Kimball International  
©2018 Kimball International, Inc.  
Part No. 3141250

# HELIO™

kimball.com / 800.482.1818