

## 5 Star Base

### Tools Required

- driver

### Hardware Required

- 2 X M6 X 10mm
- 2 X Spacers
- 2 x M6 x 16mm

### Installation

1. Unpack Shell and Base. On clean surface place shell upside down and find hole pattern identified as "A2, A1" in Figure A.
2. Add two spacers (B) on the front of the mech (2) then align the mating holes in the shell (1). See Figure B.
3. Attach Mech using 2 X M6X16 mm screws in the front (A1) and 2 X M6 X 10mm into the back (A2). See Figure C. Tighten all screws.
4. Install Cylinder (3) into the mech (2). See Figure D.
5. Install Base (4) on the Cylinder (4). See Figure E.
6. Install 5 Casters into the base. A clicking sound will occur when completely inserted. See Figure F.

Figure A



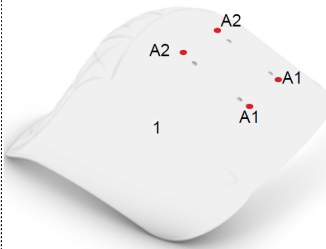


Figure B

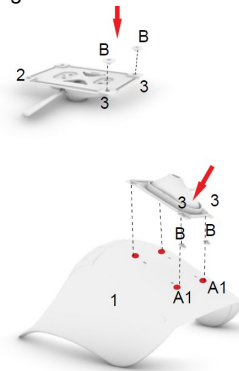

Bx2 

Figure C

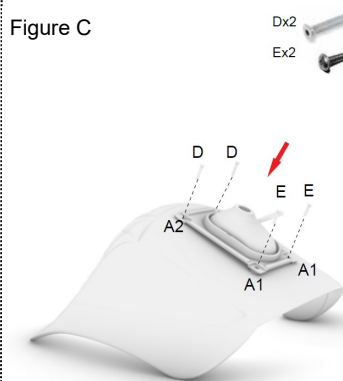

Dx2  
Ex2 

Figure D



Figure E

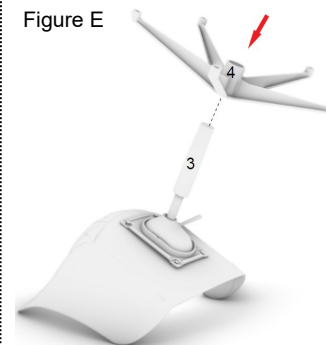


Figure F

