

Kimball®

Leather

Davenport

Florence

Showcase

DAVENPORT



70121 Cream




70112 Atlantis



70105 Bark




70124 Bayview

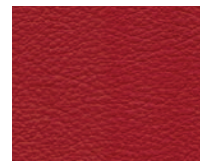

70123 Berry




70115 Black

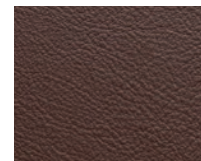


70111 Brown




70102 Camel

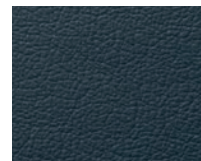


70118 Dusk

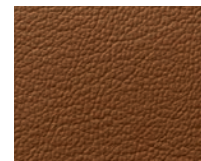


70103 Earthy

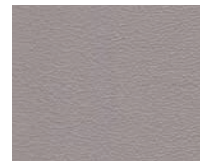


70125 Fog

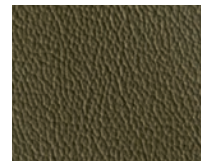

70110 Olive

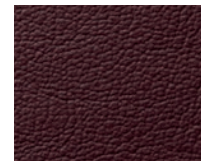


70116 Plum

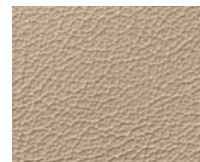

70120 Porcellana




70117 Smoke

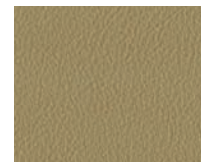


70119 Spring



70114 Tomato

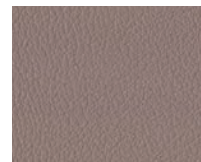

70122 Wet Sand

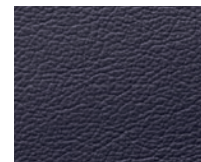


70113 Yonder

FLORENCE-features leather Powered by Crypton®



82006 Terra

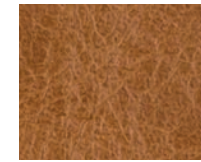


82002 Almond Biscotti




82014 Basilica



82005 Boboli Gardens

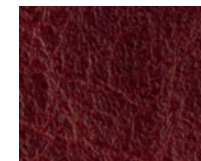


82003 Brick Path

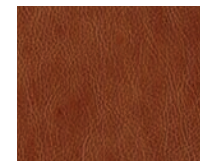


82011 Duomo




82010 Espresso

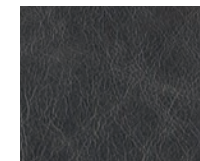

82015 Loggia

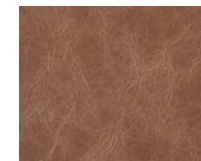


82013 Lorenzo

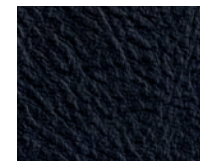


82008 Mezza Luna




82004 Oceano

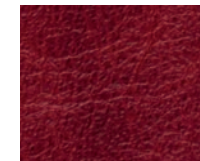


82001 Red Lily

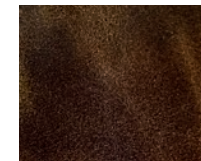

82012 Scorza

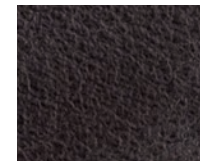

82009 Struzzo

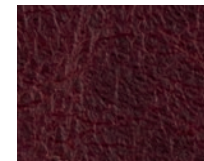


82007 Vino Rosso


SHOWCASE-features chrome free biodegradable leather.



80105 Greige

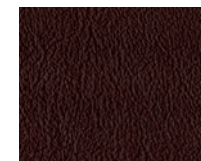

80109 Bittersweet

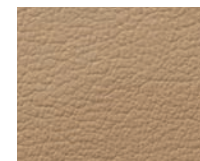


80104 Bonton



80103 Cream



80110 Jet

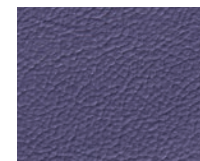


80113 Lilac



80118 Marigold



80119 Paprika

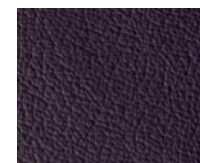

80116 Petunia



80122 Trillium

Kimball®

Grade L7 and L8

<u>Pattern</u>	<u>Grade</u>	<u>Quality</u>	<u>Thickness</u>	<u>Finish</u>	<u>Abrasion</u>	<u>Flammability</u>
Davenport	L7	Top Grain Leather Aniline Drum Dyed	1.0-1.2 mm	Semi-aniline	ASTM D7255; CS10 Wheel Tabor, 1,000 cycles with 1,000 gram weight	Passes NFPA 260 and CAL TB117-2013 Port authority of NY and NJ (Method 5903) Boston Fire Code
Showcase	L8	Top Grain Leather Aniline Drum Dyed Chrome Free	1.0-1.2 mm	Semi-aniline	ASTM D7255; CS10 Wheel Tabor, 1,000 cycles with 1,000 gram weight	Passes NFPA 260 and CAL TB117-2013 Port authority of NY and NJ (Method 5903) Boston Fire Code
Florence Powered by  CRYPTON.	L8	Top Grain Leather Aniline Drum Dyed	1.0-1.2 mm	Semi-aniline	ASTM D7255; CS10 Wheel Tabor, 500 cycles with 500 gram weight	Passes NFPA 260 and CAL TB117-2013 Port authority of NY and NJ (Method 5903) Boston Fire Code

Care

Genuine leather requires the least care of all upholstery materials; dusting with a clean dry cloth is the recommended routine cleaning method. For spots and spills, wipe excess liquid immediately and let air dry. If necessary, use warm water and mild non-detergent soap, work into a thin lather with a soft cloth, rinse with clean water and buff to restore lustre. Florence is cleanable with a cleaning solution that contains up to 10% bleach solution.